
Table of Contents

Chapter 1

Introduction	1-1
What's New in PlotWorks Version 5.7.0	1-1
Supported PlotWorks Devices	1-3
Printers	1-3
Legacy Printers	1-3
Scanners	1-3
Folders	1-4
Supported File Formats	1-5
Job Ticket Compatibility	1-5
PlotWorks Hardware Configurations	1-6
Interface Cards	1-7
Scorpion Interface Card	1-7
Gecko Interface Card	1-7
Security Key/External Dongle	1-10
PlotWorks Smart Switch I	1-11
System Requirements	1-15
PlotWorks Software Components	1-16
The Job Queue	1-16
The Job Editor	1-16
The Printer Interface	1-16
The Job Processor	1-16
Network Polling	1-16
Optional PlotWorks Components:	1-17
The Scanner Interface	1-17
Print-to-Queue	1-17
PlotWorks Client	1-17
Software Flowchart	1-18
Using this Manual	1-19
Before You Start	1-20
Documentation Conventions	1-20
Help and Technical Support	1-21
Online Help	1-21
Technical Support	1-21
PLP Internet Support	1-22
Printing Electronic Documentation	1-22

Chapter 2

Getting Started	2-1
------------------------------	------------

Installing PlotWorks®	2-1
Installing PlotWorks Server or Demo For the First Time	2-1
Updating from Version 4.3 or above preserving previous settings	2-3
Updating from Version 4.2 or Below	2-4
Opening PlotWorks Applications	2-7
Configure Your PlotWorks Applications	2-8
Configure the Job Queue	2-8
Configure and Start the Job Processor	2-8
Configure the Printer Interface	2-9
Setup the Job Editor	2-13
Saving Job Tickets	2-15
Sending Jobs for Print	2-15
System Tray Icons	2-17
Demo Mode	2-19
Network Polling	2-19
Job Editor	2-19
Printer Interfaces	2-19

Chapter 3

The Job Queue 3-1

The Job Queue Window	3-2
Toolbar Buttons	3-2
File Menu	3-3
View Menu	3-3
Setup Menu	3-4
Job Menu	3-4
Help Menu	3-5
Columns and Icons	3-6
Job Queue Structure	3-9
Setting up the Job Queue	3-10
Open an Existing Job Queue	3-10
Create a New Job Queue	3-10
Set Queue Options	3-11
Select Queue Colors	3-13
Working with Jobs in the Queue	3-15
Importing Jobs	3-15
Prioritize Jobs (Automatic Printing)	3-16
Put Jobs on Hold	3-17
Process Jobs	3-18
Printing Jobs Manually	3-18
Interrupting a Job to Print Another Immediately	3-18
Reprint a Job	3-19
Delete a Job from the Queue	3-19

Saving Jobs from the Queue to a different location	3-20
Output to File	3-21
Logs and Reports	3-22
Processing Log	3-22
Printing and Print to File Logs	3-22
Media/Capabilities Log	3-22
Job Information	3-23
Job Order	3-23
Troubleshooting	3-24
Rebuild the Queue	3-24
Reset the Activity Field for a Job	3-25

Chapter 4

The Job Editor	4-1
Creating a simple job ticket	4-3
To start a new job ticket:	4-3
To add images to a job ticket:	4-3
The Job Editor Window	4-5
The Toolbar	4-5
The Menus	4-7
The Job Grid	4-12
Changing Print Parameters	4-15
To change prototype parameters:	4-15
Editing Functions	4-15
Change Image Filenames	4-16
Saving a Job Ticket	4-16
The Detail Property Sheet	4-18
Main Tabbed Dialog Box	4-19
Specified Size Tabbed Dialog Box	4-21
Output Setup Tabbed Dialog Box	4-25
Data Format Tabbed Dialog Box	4-27
Pens tabbed dialog box	4-32
Pen/Print Options Tabbed Dialog Box	4-39
Overlays Tabbed Dialog Box	4-46
Watermarks Tabbed Dialog Box	4-49
Margins Tabbed Dialog Box	4-52
Labels Tabbed Dialog Box	4-58
Saving and applying options selected from the Detail Property Sheet	4-61
Saving and applying a Pen Set	4-61
Saving and applying watermark, margin and label settings	4-61
The Scale View	4-64
Setting Preferences	4-65
General Preferences tabbed dialog box	4-65

User Information Tabbed Dialog Box	4-67
Finishing Options	4-68
Nesting Options Tab	4-70
Processing Options	4-73
Processing tabbed dialog box	4-73
Size Tolerances Sheet	4-75
AutoCAD/DWG Direct Setup Sheet	4-76
Adding Files from a Polled Directory	4-78
Creating the Directories:	4-78
Using the Poll Directory Function:	4-79
Adding Files from a Polled FTP Directory	4-84
Using the Poll Directory Function:	4-84
Scanning from Twain Devices	4-88
Confirming your computer detects the scanner:	4-88
Twain Scanning Options	4-88
Adding images to the Job Editor from a TWAIN scanner:	4-91
Output to File	4-94
Using Output to File	4-94
Revision Highlighting	4-99
Using Revision Highlighting	4-99
Revision Highlighting Options	4-101
The File Configuration Tabbed Dialog Box	4-103
The Revision Highlighting Dialog Box Buttons	4-106
Possible error messages generated by Revision Highlighting	4-107
Process Image Files	4-109
The Process Job dialog box	4-109
Viewing Image Files	4-111
The PlotWorks Image Viewer	4-111
The Windows XP Viewer	4-111
Viewing an image	4-111
Configure an Output Destination	4-112
Configuring Multiple Destinations	4-112
Destination Types	4-114
Edit an existing Output Destination	4-118
Delete an existing Output Destination	4-119
Sending Print Jobs	4-120
Send a Special Instruction File	4-120
Job Information	4-122
Output Jobs	4-123
Output to FTP	4-125

Chapter 5

The Image Viewer	5-1
------------------------	-----

Viewing Image Files	5-1
Open the Image Viewer	5-1
The Viewer Window	5-2
Zoom In or Out	5-7
Adjust the Size of a Print	5-7
Adjust the Origin of a Print	5-7
Black Paper	5-8
Show or Hide Pens	5-8
Identify Pens	5-8
Refresh the Viewer Window	5-9
Configure a Third Party Viewer	5-9

Chapter 6

The Network Polling Program 6-1

Advantages of Network Polling	6-1
The Network Polling Window	6-2
The Network Polling Toolbar	6-2
Network Polling Menus	6-3
Columns	6-4
Setting Up Network Polling	6-6
Set Polling Options	6-6
Add a Target Directory	6-6
Modify a Polling Directory	6-11
Delete a Target Directory	6-12
Edit the Directory PFS File	6-12
Edit the Master PFS File	6-13
Polling for Jobs	6-14
Receiving Jobs from a Remote Source	6-14
Poll Target Directories	6-15
Polling Status	6-15
The Polling Log	6-15

Chapter 7

The Job Processor 7-1

The Job Processor Window	7-1
The File Menu	7-2
The View Menu	7-3
The Setup Menu	7-3
The Help Menu	7-4
Setting Up the Job Processor	7-5
Connect to a Queue	7-5
Running the Job Processor	7-7
Start and Stop Processing	7-7

Run Processing in the Background	7-7
View Processing Log	7-7

Chapter 8

The Printer Interface 8-1

The Printer Interface Window	8-3
The Toolbar Buttons	8-3
The Menu Options	8-4
The Printer Diagram	8-7
The Printer Information Box	8-8
The Print Status Box	8-8
Setting Up the Printer Interface	8-10
Set General Printing Options	8-10
Configure Device Specific Options	8-15
Generic Embedded Controller Options	8-18
Selecting Notification Sounds	8-20
Setting Up Media Inventory	8-21
About the Media Inventory	8-21
Adding Media to Inventory	8-21
Edit the Media Inventory List	8-24
Deleting Media from Inventory	8-24
Media Override	8-24
Change Media Type	8-25
Manual Feed	8-26
Printing Basics	8-28
Set Printing Modes	8-28
Printing Rush Jobs	8-28
Display Images When Printing	8-30
Printing Separator Pages	8-30
Advanced Options	8-33
Opening the Advanced Options dialog box.	8-33
The Vector Imaging and Raster Imaging Tabbed Dialog Boxes	8-34
The RK Color Model Specific Tab Window	8-37
Connect to a Different Queue	8-39
Job Recovery	8-40
Printer Errors	8-41
Out of Toner	8-41
Media Type Unknown Error	8-41
Paper Jam	8-42
Simulate Printing	8-44
Printer-Specific Options	8-46
XES MAX 200 and 8180 Printer Interfaces	8-46
XEROX WIDE FORMAT 8825, 8830, & 8850	8-51

Xerox 8840D/Fuji Xerox 4024 Printer Interface Options	8-53
Xerox 8845/Fuji Xerox 4036 Printer Interface Options	8-54
Pen Widths	8-55
Using a Folder with the 8845	8-55
XEROX WIDE FORMAT 721p, 8855 and KIP 8000	8-56
KIP 3620 Printer Interface Options	8-58
KIP 2950 Options	8-59
KIP 1230 Options	8-60
KIP 7095 Options	8-61
KIP 9010 Options	8-62
Océ 9600 Printer Interface Options	8-63
Océ 9800 Options	8-64
Generic Embedded Controller Printers	8-65
Selecting a Different Printer Interface from an open one	8-65
Change from a Color to a Monochrome Printer	8-66
Socket Printers	8-67
Enable LMHOSTS Lookup	8-67
Obtaining the IP Address:	8-67
AccXES Controller Driven Printers	8-71
Océ Power Logic Controller Driven Printers	8-73
Kyocera-Mita Controller	8-74
Windows Printers	8-76
Selecting a Windows Printer	8-76
Change from Color to Monochrome	8-77
Paper Sizes Supported by Windows Printers	8-77

Chapter 9

The Scanner Interface	9-1
Opening the Scanner Interface	9-1
The Scanner Interface Window	9-2
Setting Up the Scanner Interface	9-17
Set Basic Scanning Parameters	9-17
Set Up File Naming	9-17
Image File Formats	9-20
Set the Scanning Resolution	9-20
Set the Scanning Speed	9-20
Choose a Document Ejection Option	9-20
Right Edge Scanning	9-21
Reduce or Enlarge an Image	9-21
Invert Images	9-21
Mirror Image	9-21
Set the Document Size	9-21
Set the Document Offset	9-22

Setting the Image Data Buffer Size	9-23
Enhancing Images	9-24
Remove Background Automatically	9-24
Working with Standard Configurations	9-25
Scanning, Copying and Viewing	9-26
Scan Documents Automatically	9-26
Scan Images into a Job Ticket	9-26
Scan-to-Print (Copy)	9-27
Rescan a Document	9-27
Scanning a Document to Replace a Saved Digital Document	9-27
Send the Current File to the Printer	9-31
View a Scanned Image	9-31
Scanner-Specific Options	9-33
Xerox 7336 Scanner Interface	9-33
7336 Scan Controls tab	9-33
7336 General Configuration Options	9-34
Xerox 7356 Scanner Interface	9-35
Xerox 7396 Scanner Interface	9-37
Xerox 7399 Scanner Interface	9-39
Xerox MAX 200 and 8180 Scanner Interfaces	9-42
Océ 9800 TWAIN Scanner	9-45
Synergix Scanner	9-47
Color Scanning Support	9-49
Ensure the Scanner is Ready to Use	9-49
Configure TWAIN Scanning Options	9-50
How to use the Synergix Scan System	9-51
Synergix Scan System options in detail	9-56
Vidar Flash Scanner Interface	9-70
Vidar Flash+ Scanner Interface	9-71
KIP 2035 and 7095 Scanner Interface	9-74
KIP 2020 and 2030 Scanner Interface	9-75
KIP 2040 Scanner Interface	9-76
KIP 2950 Scanner Interface	9-77
Océ 9800 Scanner Interface	9-79
Contex FSS/FCS Scanners	9-80

Chapter 10

Advanced Reporting Utility (ARU)	10-1
Producing a Job Report	10-1
Specifying what Data the ARU Log Collects	10-2
Editing the DEF File	10-2
ARU Data Fields	10-3
Disabling the Printer ARU	10-14

LOG Files	10-15
Archiving a log file	10-15
ARU file size	10-15
Using the ARU Log to Generate Reports	10-16
Importing the ARU Log File into Microsoft EXCEL	10-16
Importing the ARU log file into Microsoft Access	10-17

Chapter 11

Folder Information	11-1
Supported Folders	11-1
Setting up the Folder	11-2
Connecting the PlotWorks Folder Cable	11-2
Setting up GFI Folders	11-4
Media Requirements for Folding	11-7
Setting up the Printer Interface to use your Folder	11-8
Fold Types and Options	11-11
Fold Types	11-11
Folding Options	11-14
Folding and Image Orientation	11-17
Specifying the Title Block Location	11-17
Specifying Folding Options in Job Tickets	11-20
Folding Options for All Folders	11-20
Folding Options for the MAX 200 NACO	11-27
Folding Options for the MAX 200 EO	11-29
Folding Options for GFI Folders	11-31

Chapter 12

Print-to-Queue	12-1
Just What is Print-to-Queue?	12-1
Considerations before installing Print-to-Queue	12-2
Installing Print-to-Queue	12-3
Editing a PFS File	12-3
Sample Custom PFS File	12-4
Selecting a Driver	12-6
Mapping a Local Printer to the PlotWorks Port on Windows NT	12-6
Using a Network Printer on Windows NT	12-12
Mapping a Local Printer to the Port (Windows XP)	12-13
Output a Job to the Print-to-Queue Printer	12-20
Configuring LPD to Work with PlotWorks	12-20
Configuring PlotWorks and Print-to-Queue	12-20
Configuring NT Workstation 4.0 to support LPD	12-20
Setting Up a Line Printing Utility (LPR)-Compatible Printer	12-22
Printing to PlotWorks using LPR	12-23

Configuring Linux to Submit to Plotworks Job Queue	12-24
Printing from AutoCAD or Microstation to the Job Queue	12-24
Troubleshooting	12-24

Appendix A

Memory Requirements Appendix A-1

How to calculate the amount of RAM needed for each Computer: Appendix A-1

To calculate: Appendix A-1

Imaging Memory Setting Guidelines for the Printer Interface Appendix A-3

Windows and Generic Embedded Controller Printers Appendix A-4

Image Data Buffer Size Guidelines for the Scanner Interface Appendix A-5

Appendix B

Error Messages and Common ProblemsAppendix B-1

The Job Queue Appendix B-1

Network Polling Appendix B-5

The Printer Interface Appendix B-8

Common Printing Problems Appendix B-8

Error Messages Appendix B-9

Job Editor Appendix B-18

Job Processor: Appendix B-26

Image Viewer Appendix B-27

Scanner Interface: Appendix B-27

Appendix C

Image File Requirements Appendix C-1

Plot Files Appendix C-1

CalComp Commands Appendix C-3

CalComp Error Codes Appendix C-4

HP-GL Supported Command List Appendix C-5

HP-GL/2 Appendix C-11

Appendix D

PFS Files Appendix D-1

Understanding PFS Files Appendix D-1

PlotWorks Network Polling Appendix D-1

PFS File Types Appendix D-3

Directory-level Defaults Appendix D-4

Site-level Defaults Appendix D-4

PFS File Layout Appendix D-5

JOB section Appendix D-5

FILE section Appendix D-5

Keywords and Values	Appendix D-5
Defining Parameters	Appendix D-7
How to Use this Section	Appendix D-7
Parameter Setting Requirements	Appendix D-8
Pens Data	Appendix D-8
Size Data	Appendix D-8
Keywords by Category	Appendix D-9
Administrative Information	Appendix D-9
AutoCAD, DWG & DXF File Setup	Appendix D-18
Pen Control	Appendix D-19
Folding	Appendix D-25
Overlay Control	Appendix D-29
Nesting Controls	Appendix D-30
Watermarks	Appendix D-31
Label Control	Appendix D-35
Log File Data	Appendix D-38
Locking Parameters	Appendix D-39
Advanced Features	Appendix D-40
Special Fields	Appendix D-40
Open and Write to a File	Appendix D-41
Printing a Job (Network Polling Mode 3)	Appendix D-42
Sending Jobs to a Target Directory	Appendix D-42
The Polling Log File	Appendix D-42
Sample PFS Files	Appendix D-42
Incoming PFS File	Appendix D-43
Sample User Interfaces	Appendix D-44
Sample Windows Interface	Appendix D-44
PFS File Created from Windows Interface	Appendix D-44
Sample Excel Interface	Appendix D-45
PFS File Created from Excel Interface	Appendix D-46

Appendix E

Configuring RAS to Output PlotWorks Job Files	Appendix E-1
Install & Configure a Remote Access Server (Hub)	Appendix E-2
Verify Current Configuration	Appendix E-2
Install RAS	Appendix E-4
Create User Accounts for Remote Access Service	Appendix E-7
Create Shared Folders	Appendix E-8
Start the Remote Access Administrator	Appendix E-9
Making Remote Access Service Start Automatically	Appendix E-9
Stopping the Remote Access Admin	Appendix E-9
Set Up the Client's Dial-Up Networking Connection	Appendix E-10
Be Prepared	Appendix E-10

Verify Current Configuration	Appendix E-10
Add a Dial-Up Networking Connection	Appendix E-12
Make the Connection	Appendix E-13
RAS Installation	Appendix E-14
Set up the Client Dial-Up Networking Connection (Win95)	Appendix E-15
Add a Dial-Up Networking Connection	Appendix E-16
Make the Connection	Appendix E-17
Installing Network Protocols (Windows NT)	Appendix E-18
Install TCP/IP	Appendix E-18
Install NWLink IPX/SPX Compatible Transport	Appendix E-22
Installing NetBEUI Protocol	Appendix E-23
Installing the MS Loopback Adapter	Appendix E-24
Installing Network Protocols (Win95)	Appendix E-24
Installing TCP/IP	Appendix E-24
Installing IPX/SPX Compatible Protocol (Win95)	Appendix E-25
Installing NetBEUI Protocol	Appendix E-26
Installing Client for Microsoft Networks	Appendix E-27
Installing Dial-Up Networking on Win95	Appendix E-27
Output Job Tickets	Appendix E-28
Installing FTP	Appendix E-29
Installing Internet Information Server on an NT Server	Appendix E-30
Configuring Windows NT 4.0 Workstation for FTP	Appendix E-32

Appendix F

Processing AutoCAD JobsAppendix F-1

DWG Direct* File Processing	Appendix F-1
AutoCAD File Processing	Appendix F-1
How AutoCAD Files are Processed	Appendix F-1
Prechecking	Appendix F-2
Preprocessing and Interaction	Appendix F-2
AutoCAD Printing Boundaries	Appendix F-2
PlotWorks Parameters and AutoCAD	Appendix F-3
Configuring AutoCAD For Use with PlotWorks	Appendix F-6
Configuring AutoCAD R14	Appendix F-6
Configuring AutoCAD 2000 or 2002	Appendix F-7
Configuring AutoCAD or DWG Direct* in PlotWorks	Appendix F-9
AutoCAD and “Error Free Printing™”	Appendix F-10
Examples of parameter settings	Appendix F-11
Identifying Errors	Appendix F-13
Printing with AutoCAD using Network Polling Mode 1	Appendix F-14
.....	Appendix F-16

Appendix G

Repro Desk Support	Appendix G-1
Supported Repro Desk Files	Appendix G-1
Printing Repro Desk Jobs with PlotWorks	Appendix G-3
Processing Files before Outputting from Repro Desk	Appendix G-3
Using PlotWorks Network Polling for Repro Desk Jobs	Appendix G-3
Polling for Repro Desk VIC Files	Appendix G-5
Sending Files from Repro Desk to PlotWorks	Appendix G-6
Outputting VIC files from the Repro Desk Client	Appendix G-7
Outputting Jobs from the Repro Desk Queue	Appendix G-7
Importing Repro Desk Job files	Appendix G-8
Repro Desk Pens and Patterns	Appendix G-13
Repro Desk Pen Properties and the PlotWorks Equivalent ...	Appendix G-13
PlotWorks Pen Macros not supported by Repro Desk	Appendix G-14
Importing Repro Desk Pattern Files	Appendix G-14
Importing a User Defined Repro Desk pattern	Appendix G-14
Reverting to the Default Standard Patterns	Appendix G-15
Warnings and Other Print Parameter Issues	Appendix G-16
Warnings	Appendix G-16
Print Parameter Issues	Appendix G-20
PlotWorks Settings Not Supported by Repro Desk	Appendix G-24
Printing differences between Repro Desk and PlotWorks	Appendix G-24

License Agreements

PlotWorks End-User Licence Agreement	Waranty-i
ADOBE ACROBAT READER LICENSE	Waranty-v

Index

.....	Index-i
-------	----------------

